
Greenhouse Stores

ASSEMBLY GUIDE

Saturn 6700

8x8 Vitavia greenhouse

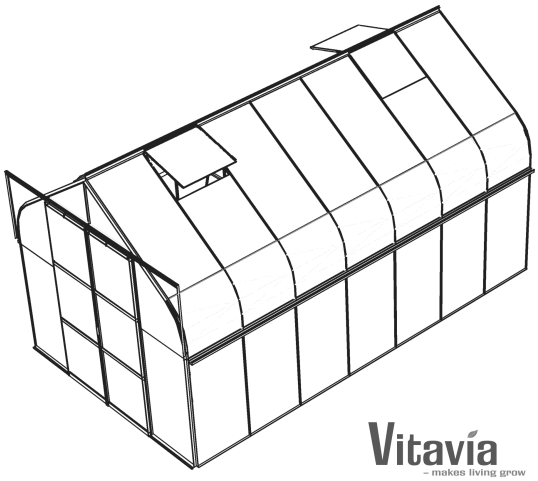


10
steps, base first

2
people needed


2544 mm × 2544 mm
base size (A × B)

Online version with every size: www.greenhousestores.co.uk/instructions/vitavia-saturn/


The build at a glance




0
Prepare the base




1
Build both side frames




2
Build the back gable




3
Build the door gable




4
Join and raise the frame




5R
Fit the right-hand door



5L
Fit the left-hand door



6
Build and fit roof vents



7A
Fit glazing layout A



7B
Fit glazing layout B

Drawings: Vitavia (Vitavia manual 006.01.1212 (Saturn, printed as Diana)). Words and layout: Greenhouse Stores, greenhousestores.co.uk. Keep this guide with your greenhouse.

READ THIS FIRST

Before you start

Six golden rules

1. Build frames loose; tighten only when the whole greenhouse stands square on its base.
2. Measure both diagonals; they must be equal.
3. Never overtighten nuts 1002: maximum 3 Nm. Overtightening strips aluminium and cracks glass.
4. Fit extra bolts when instructed; you cannot add them after bar ends are capped.
5. Build with two people.
6. Always anchor your greenhouse. An unanchored greenhouse can blow away.

Get ready

- [ ] Read the whole guide once before you start.
- [ ] Gather flat/PH2 screwdrivers, 10 mm socket spanner/wrench, 10 mm combination spanner, knife, tape measure, spirit level. Set cordless drill adjustable torque low.
- [ ] Wear gloves, safety glasses, sturdy shoes and a hat. Aluminium edges are sharp. Clear up broken glass straight away.
- [ ] Open one bundle at a time and keep opened bundles apart. Mixed bundles are the main cause of lost-part searches.
- [ ] Check every part against the parts check pages. Contact Greenhouse Stores before you begin if anything is missing.
- [ ] Read single-frame drawings as views from inside the greenhouse. Read double-frame drawings as views from outside.
- [ ] Choose a sunny spot with as much shelter from wind as possible.

Read next: 10 common greenhouse installation mistakes (and how to avoid them)

 Single frame: inside view  Double frame: outside view

BEFORE STEP 1


Parts check

Open one bundle at a time. Tick each part as you find it. The number in green is how many your Saturn 6700 should have.


Bars and profiles




1020
Glazing seal (reel)
93000 mm **×1**




1032
Vertical bar
1214 mm **×6**




1059
Upper bar
621 mm **×2**




1060
Door bar
621 mm **×2**




1061
621 mm **×4**




1062
Door bar
613 mm **×2**




1063
Vent sill
635 mm **×2**




1064
Vent top bar
602 mm **×2**




1065
Vent side bar
520 mm **×4**




1066
Vent bottom bar
602 mm **×2**




1067
Window opener
295 mm **×2**




1092
Corner plate
120 mm **×4**




2005
100 mm **×1**




2022
2484 mm **×3**




2046
2484 mm **×1**




2048
Horizontal bar
1318 mm **×1**




2050
Ridge bar
2484 mm **×1**




2054
1318 mm **×1**




2057
Roof brace
1184.5 mm **×3**




2089
619 mm **×1**




2090
619 mm **×1**




2091
175 mm **×2**




2094
426 mm **×1**




2100
425 mm **×2**




5021
Door seal
1991 mm **×2**




5028
2484 mm **×2**




5034
1214 mm **×4**




5035
1884 mm **×2**



5036
1884 mm **×2**




5039
2476 mm **×1**



5041
Vertical bar
2030 mm **×2**




5042
Vertical bar
2030 mm **×2**




5043
Door runner support
750 mm **×2**




5047
Door runner bar
1270 mm **×2**




5049
Cross brace
1304 mm **×4**




5055
Roof glazing bar
1861 mm **×6**




5058
Outside side bar
1991 mm **×2**



5063
2476 mm **×2**




5075
1304 mm **×1**




5076
1304 mm **×1**

5091
Corner plate
178 mm **×8**


5095
Cross brace
1681 mm **×6**




5096
619 mm **×1**



5097
619 mm **×1**



5098
Inside side bar (right)
1991 mm **×1**




5099
Inside side bar (left)
1991 mm **×1**




5101
Vertical bar
2030 mm **×1**


Fixings and small parts




1001
Bolt
M6 × 12 **×211**




1002
Nut
M6 **×214**



1003
Screw
3.5 × 16 **×32**




1004
M4 × 16 **×4**




1005
Bolt
M6 × 40 **×2**




1006
Screw
3.5 × 6 **×12**



1007
Nut
M4 **×4**



1009
Washer
Ø8/4 **×4**



1010
Spacer
32 **×2**



1011
Glazing spring clip
70 **×358**



1012
Glass retaining clip
11 **×105**



1014
Door glider
20 **×4**



1015
Door roller
Ø22 **×4**



1017
End cap
46 **×4**



1019
Plastic cap
15 **×2**



1111
Door fixer
37.5 **×2**



1112
Door fixer
7.4 **×2**



1113
Door fixer
25 **×2**



1500
Bolt
M6 × 5 **×2**



1515
Nut
M6 **×2**



2001
Corner bolt
M6 × 12 **×1**



2006
10 **×2**




2016
40 **×4**



2092
37 **×2**



2093
56 **×3**



5001
33 **×1**



5002
33 **×1**



5012
10 **×14**



5090
610 × 610 **×8**




6060
Washer
Ø12/6 **×2**


STEP 0

0 Prepare the base

Start with an exactly square, level base.

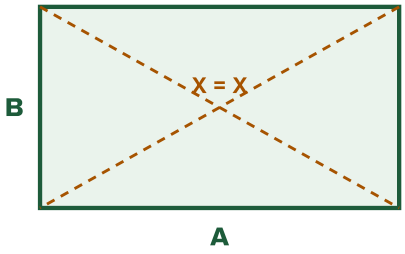

	SATURN 6700
A	2544 mm
B	2544 mm

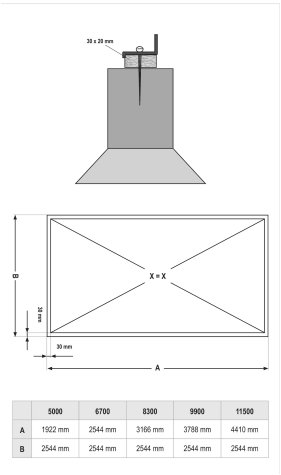

	5000	6700	8300	9900	11500
A	1922 mm	2544 mm	3166 mm	3788 mm	4410 mm
B	2544 mm	2544 mm	2544 mm	2544 mm	2544 mm

Vitavia drawing 0. The circled numbers match the pictures below.

INSTALLER TIP

Use ground spikes or anchor legs on soil only. On concrete or paving, bolt the base down with suitable fixings; use one method, not both.

WATCH OUT

An uneven or unsquare base leaves the frame uneven or unsquare, and the glass will not fit. Check both diagonals twice.

0.1

Make the base exactly square and level; measure both diagonals and check they match, as X = X shows. Choose the accessory zinc-coated steel base for the easiest option.

0.2

Only for your own stone or concrete foundation, use this page's A and B. Fix treated timber between foundation and aluminium frame: 18 mm minimum height, 32 mm maximum width; 50 mm bolts (not supplied). The foundation must extend below frost level.

0.3

On very windy, exposed sites, drill through the greenhouse bottom profile and the steel base. Bolt them together.

STEP 1


1 Build both side frames

Build two identical sides flat on the ground, with every bolt loose.

YOU NEED

1001 ×34	**1002** ×34
1032 ×6	**2022** ×2
2093 ×2	**5028** ×2
5091 ×4	**5095** ×4

6700
2x

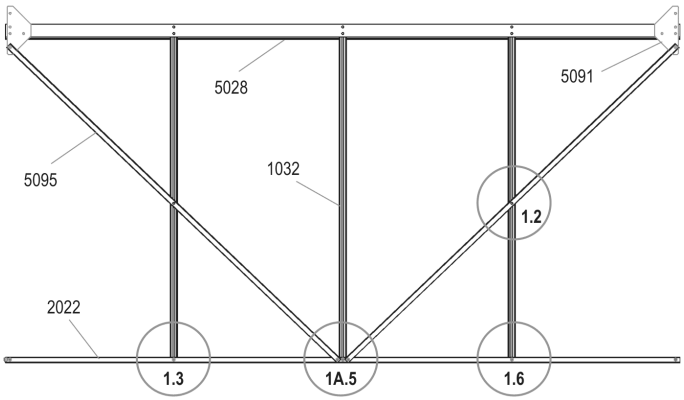

Vitavia drawing 1A. The circled numbers match the pictures below.

INSTALLER TIP


Lay the parts on a blanket or lawn to protect the finish. Leave every nut loose so the frame can flex during step 4.

WATCH OUT

Uprights 1032 per side vary by size. The 5000 needs 2, 6700 needs 3, 8300 needs 4, 9900 needs 5 and 11500 needs 6. Fit every extra bolt before closing bar ends.


Watch: Build the sides

Scan with your phone camera. Vitavia video.

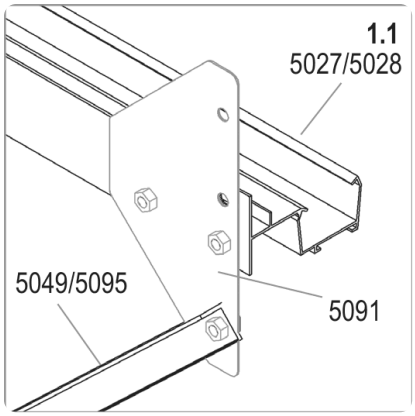


1.1

Loosely fit corner plate 5091 where your eave bar (5027, 5028, 5029, 5030 or 5031) meets brace (5049 or 5095). Leave these bolts loose for the gable connections in step 4.

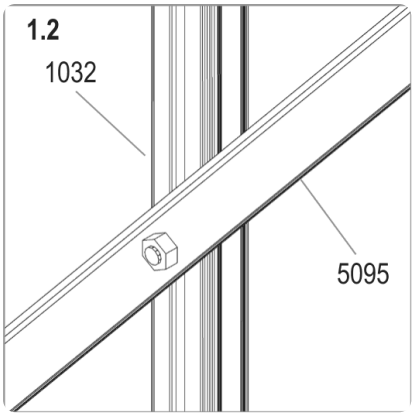


1.2

On the 6700, 8300, 9900 and 11500, slide one extra bolt into each outside upright 1032. Leave it ready for cross brace 5095.

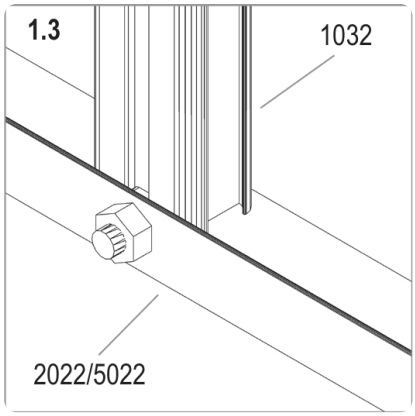


1.3

Bolt the bottom of each upright 1032 to your sill bar (5022, 2022, 2023, 2024 or 2025).

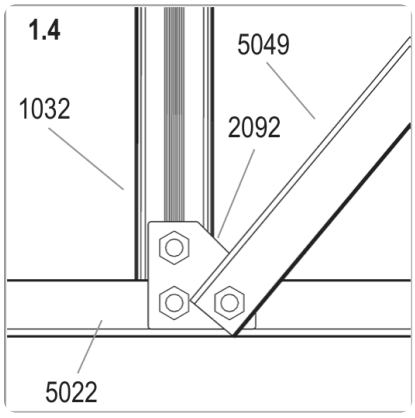


1.4

Join upright 1032 and your brace (5049 or 5095) to your sill bar with connector plate 2092, as shown.

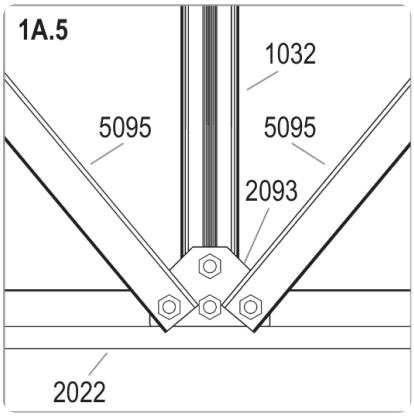

1A.5

On the 6700, join both cross braces 5095 and upright 1032 to sill bar 2022 with connector plate 2093.

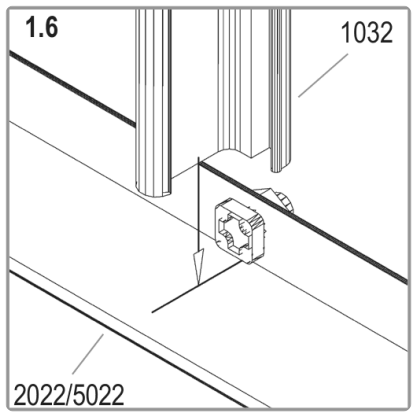

1.6 OUTSIDE VIEW

Slide the bolts into the sill bar channel through its open end, in the arrow's direction. Insert them before you close the bar end.


STEP 2

2 Build the back gable

Build the plain back gable flat on the ground, with all connections loose.

YOU NEED

 **1001** ×34	 **1002** ×34
 **2022** ×1	 **2054** ×1
 **2091** ×1	 **2093** ×1
 **2100** ×1	 **5034** ×2
 **5035** ×1	 **5036** ×1
 **5039** ×1	 **5041** ×1
 **5042** ×1	 **5091** ×2
 **5095** ×2	 **5101** ×1

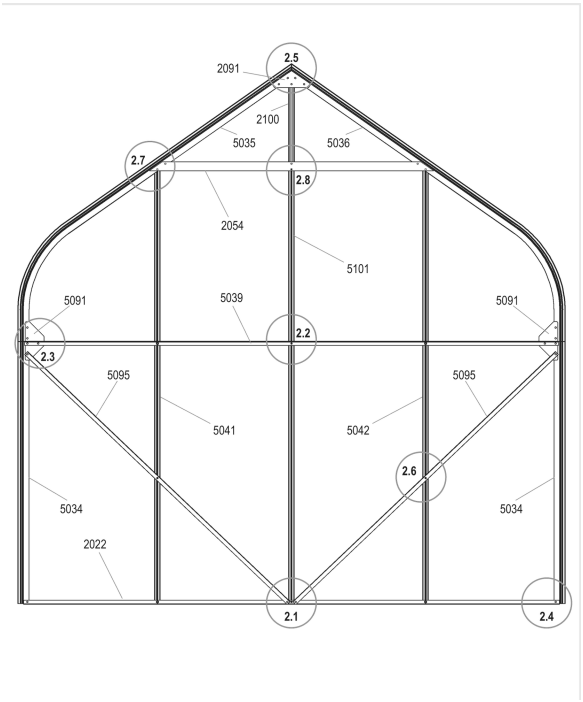

Vitavia drawing 2. The circled numbers match the pictures below.

INSTALLER TIP


Build from the bottom upwards. Slide each extra bolt into its channel before you fit the bar above it.

WATCH OUT

Insert the extra bolts now. Without them, you must take the gable apart to fit the cross braces later.


Watch: Rear gable end

Scan with your phone camera. Vitavia video.

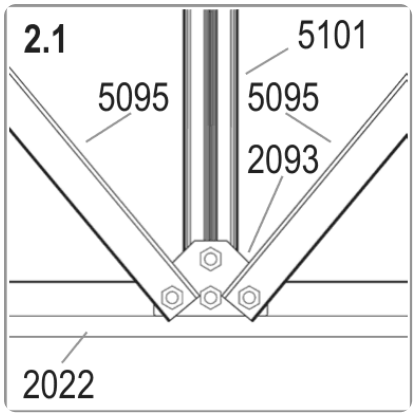


2.1

At the bottom centre, join upright 5101 and both cross braces 5095 to sill bar 2022 with connector plate 2093.

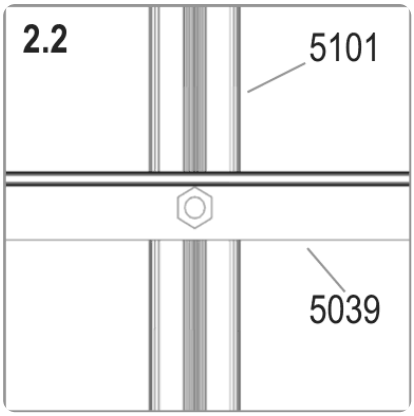


2.2

Bolt horizontal bar 5039 across upright 5101. Insert two extra bolts into each vertical bar 5041 and 5042 for cross braces, and one into 5101.

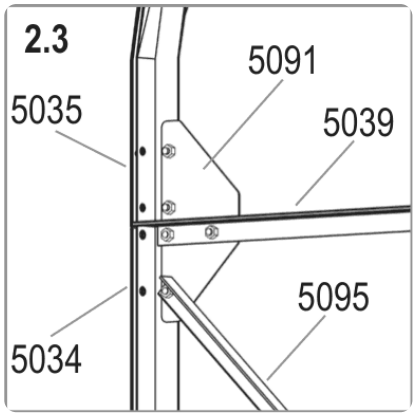


2.3

At each side, use corner plate 5091 to join roof bar 5035, horizontal bar 5039, cross brace 5095 and corner bar 5034.

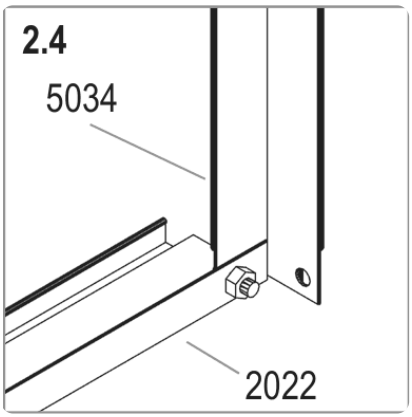


2.4

At each bottom corner, bolt corner bar 5034 to sill bar 2022.

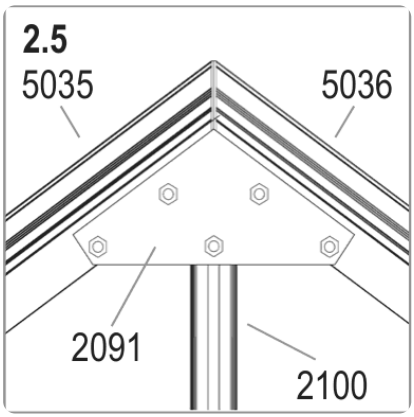


2.5

At the peak, use plate 2091 to join roof bars 5035 and 5036 to the top of upright 2100.

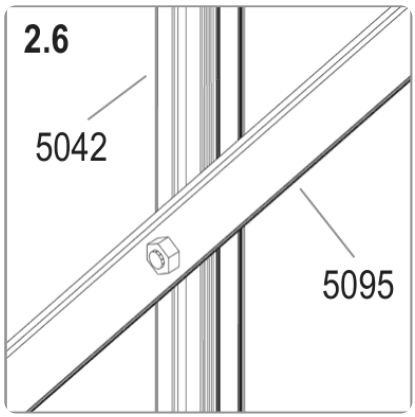


2.6

Bolt cross brace 5095 across vertical bar 5042.

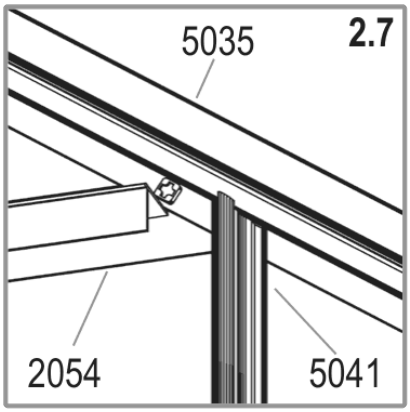

2.7 OUTSIDE VIEW

Join horizontal bar 2054 to vertical bar 5041 under roof bar 5035, as shown.

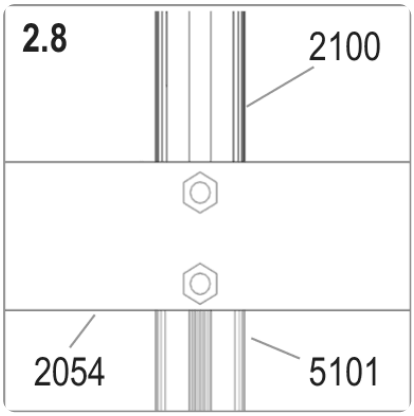

2.8

Join upright 2100 and vertical bar 5101 to horizontal bar 2054 with two bolts.


STEP 3

3 Build the door gable

Build the front door gable flat on the ground, with all connections loose.

YOU NEED

 **1001** ×43	 **1002** ×43
 **2046** ×1	 **2048** ×1
 **2089** ×1	 **2090** ×1
 **2091** ×1	 **2092** ×2
 **2094** ×1	 **2100** ×1
 **5001** ×1	 **5002** ×1
 **5034** ×2	 **5035** ×1
 **5036** ×1	 **5041** ×1
 **5042** ×1	 **5047** ×2
 **5075** ×1	 **5076** ×1
 **5091** ×2	 **5096** ×1
 **5097** ×1	

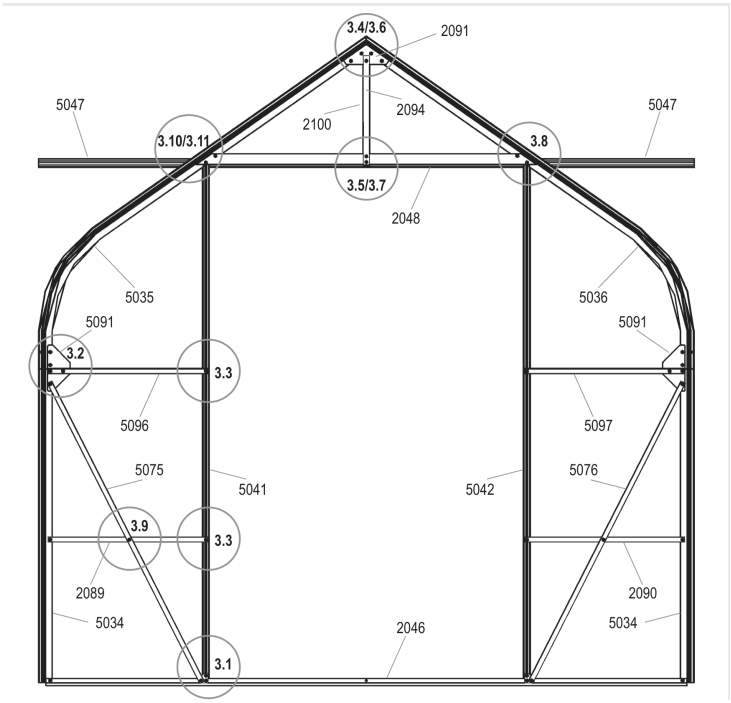

Vitavia drawing 3. The circled numbers match the pictures below.

INSTALLER TIP


The Saturn has two sliding doors. Each door runner bar 5047 carries one door.

WATCH OUT

If parts will not line up, check for bars fitted upside down or back to front. Do not force them.


Watch: Door frame (front gable)

Scan with your phone camera. Vitavia video.

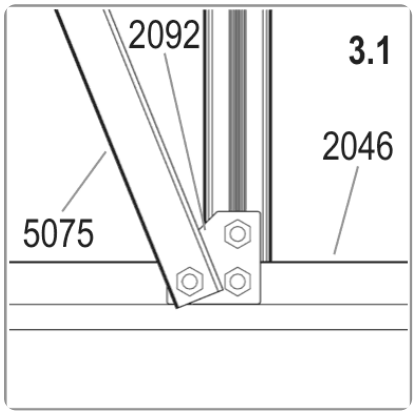


3.1

At the bottom, join brace 5075 and vertical bar 5041 to bottom bar 2046 with connector plate 2092.

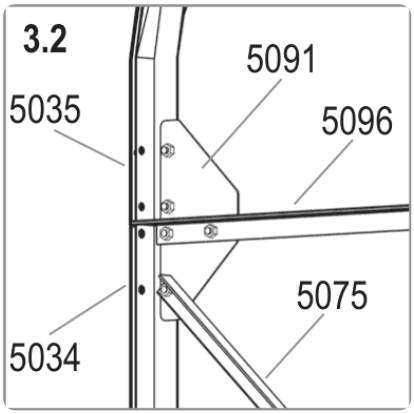


3.2

At each side, use corner plate 5091 to join roof bar 5035, bar 5096, brace 5075 and corner bar 5034.

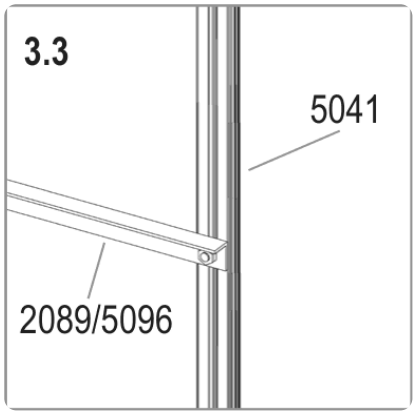


3.3

Bolt bars 5096 and 2089 to vertical bar 5041. Insert two extra bolts into each vertical bar 5041 and 5042.

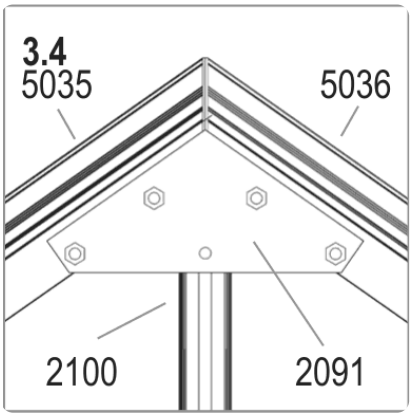


3.4

At the peak, use plate 2091 to join roof bars 5035 and 5036 to the top of upright 2100.

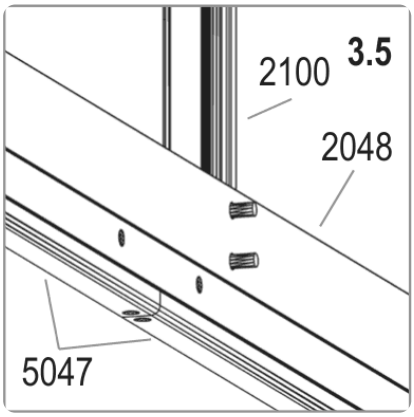


3.5

Bolt upright 2100 to horizontal bar 2048, with door runner bar 5047 below.

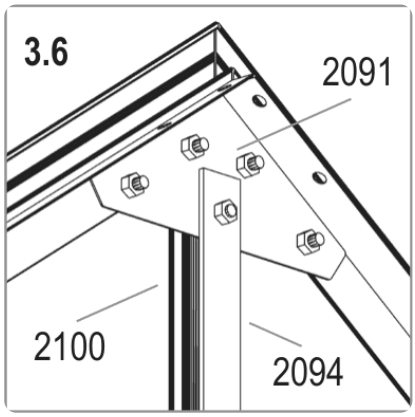


3.6

Join upright 2100 and bar 2094 with plate 2091, as shown.

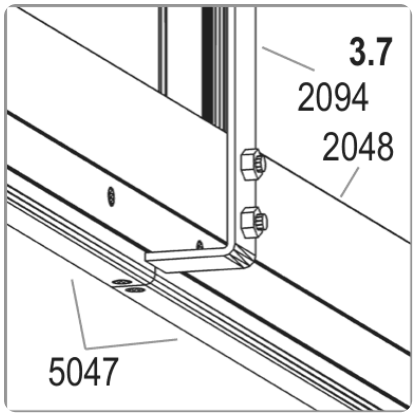


3.7

Bolt bar 2094 to horizontal bar 2048, with door runner bar 5047 below.

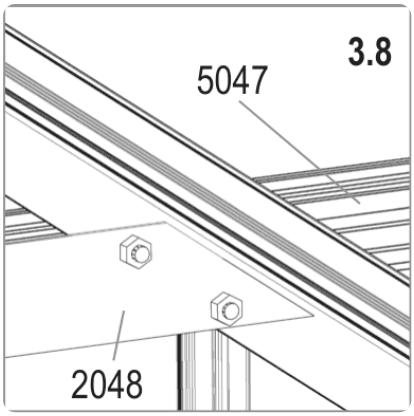


3.8

Join horizontal bar 2048 and door runner bar 5047, as shown.

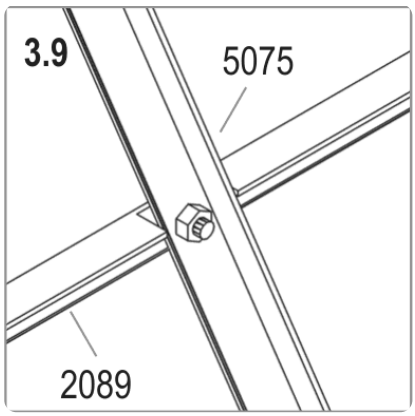


3.9

Bolt brace 5075 where it crosses bar 2089.

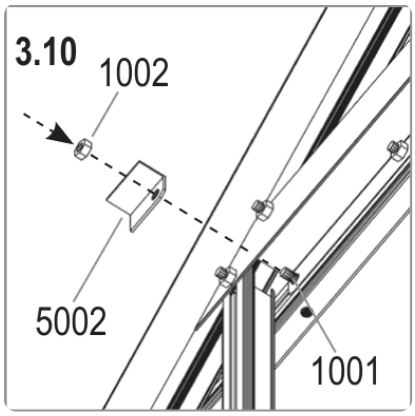


3.10

Connect part 5002 with bolt 1001 and nut 1002, as shown.

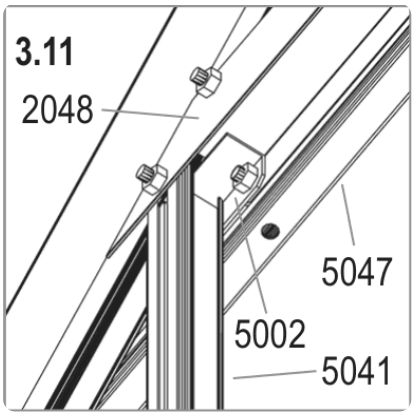

3.11

Join part 5002 to door runner bar 5047 at vertical bar 5041 and horizontal bar 2048. Connect parts 5001 and 5002 with a bolt.

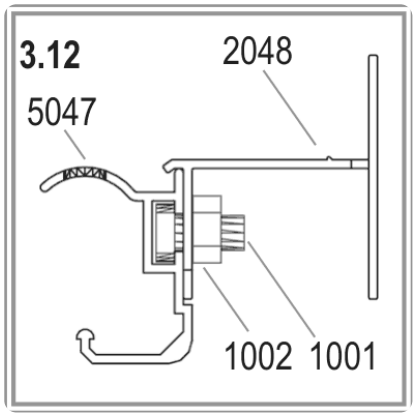

3.12 OUTSIDE VIEW

Work from outside and loosely connect door runner bars 5047 to horizontal bar 2048. Use three nuts 1002 and bolts 1001.

STEP 4

4 Join and raise the frame

Work with another person to join the frames and stand the greenhouse up.

YOU NEED

 **1001** ×68	 **1002** ×70	 **1005** ×2	 **1010** ×2	 **1092** ×4
 **2050** ×1	 **5043** ×2	 **6060** ×2	 **1017** ×4	 **2057** ×3
 **5049** ×4	 **5055** ×6	 **5063** ×2		

INSTALLER TIP


Count the circled extra bolts on every roof bar before you fit any end cap. Quantities depend on greenhouse size and vent positions.

WATCH OUT


Keep every connection loose until the greenhouse is square on its base, or you can bolt in a twist. You cannot adjust the frame after glazing.

Watch: Front and roof bars

Scan with your phone camera. Vitavia video.

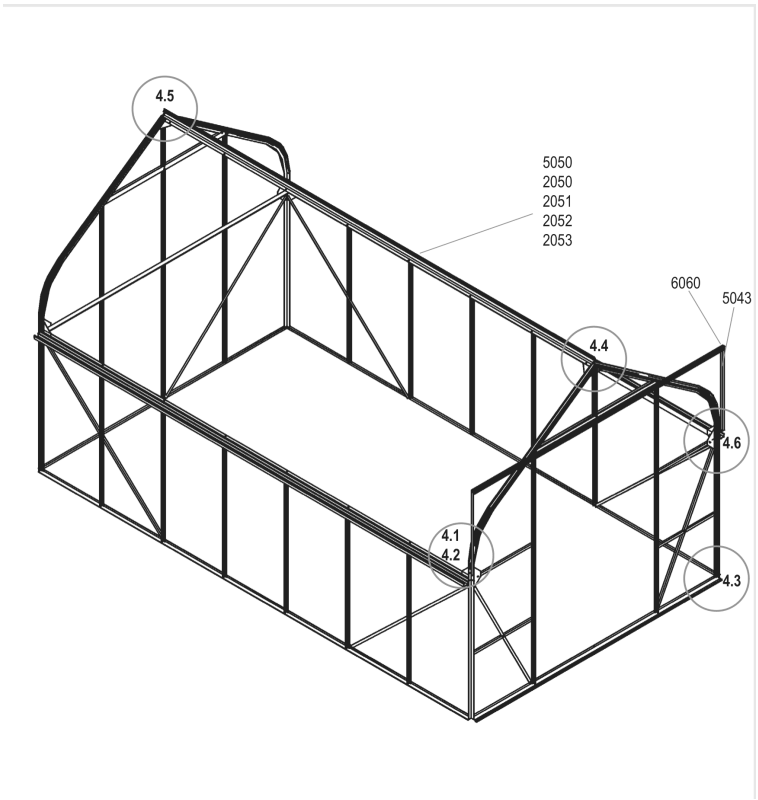


Vitavia drawing 4A. The circled numbers match the pictures below.

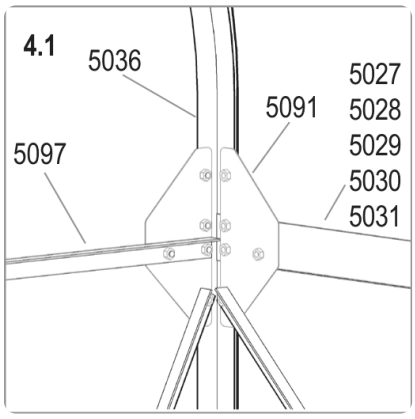


4.1

Use corner plate 5091 to bolt your eave bar (5027, 5028, 5029, 5030 or 5031) to each gable. Make this connection where roof bar 5036 and bar 5097 meet.

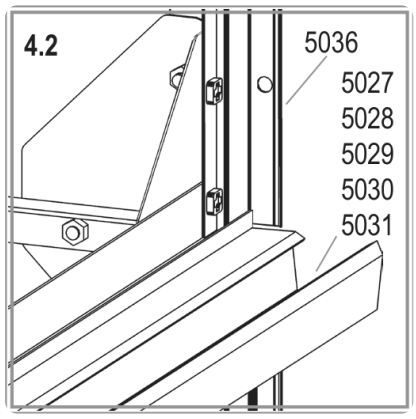


4.2 OUTSIDE VIEW

Work from outside and bolt the side frame to the gable where your eave bar meets roof bar 5036.

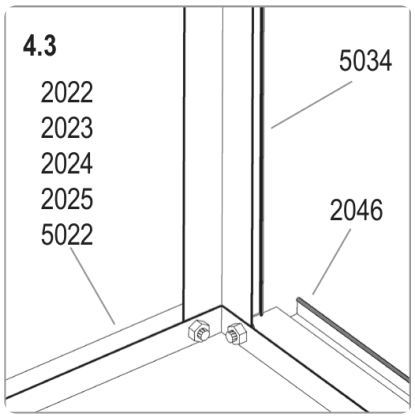


4.3

Bolt each side frame to the gables where your sill bar (5022, 2022, 2023, 2024 or 2025) meets 5034 and 2046.

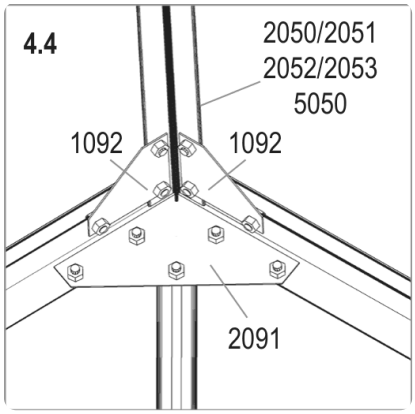


4.4

Fit your ridge bar (5050, 2050, 2051, 2052 or 2053). Fix it to each gable with corner plates 1092 beside plate 2091.

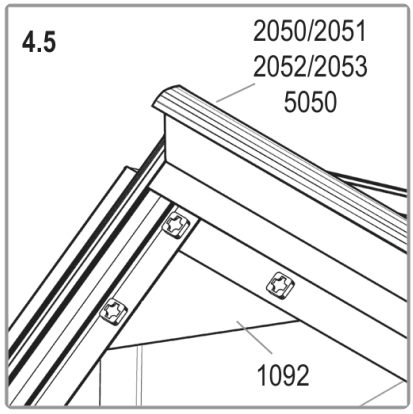


4.5 OUTSIDE VIEW

Fit corner plate 1092 under the ridge bar at each gable end, as shown.

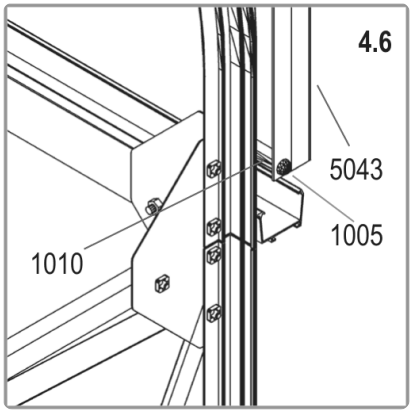


4.6 OUTSIDE VIEW

Connect each door runner support 5043 to its runner bar 5047 with washer 6060. Fix each support to the gable with bolt 1005 and spacer 1010.

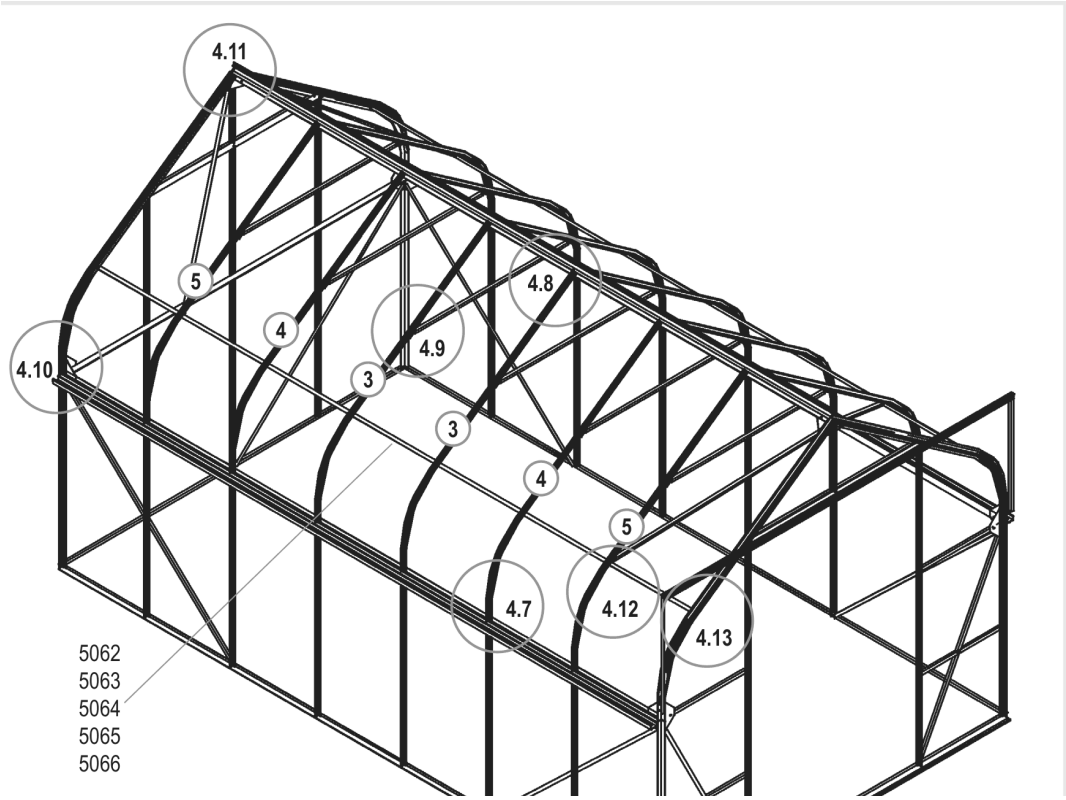


Vitavia drawing 4B. The circled numbers match the pictures below.

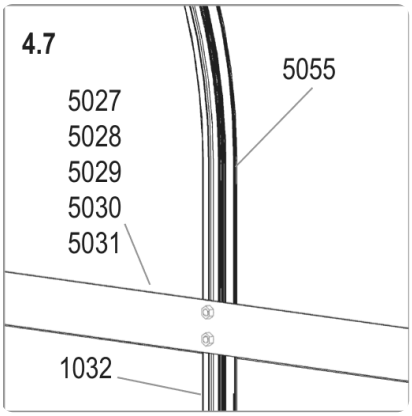


4.7

Bolt roof glazing bars 5055 to your eave bar above uprights 1032.

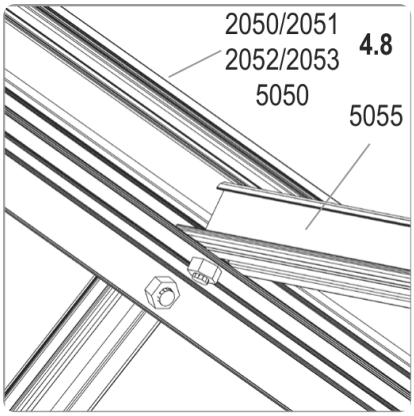


4.8

Bolt roof glazing bars 5055 to your ridge bar and insert extra bolts to match your chosen vent positions. Read circled bolt quantities from both ends of each bar in the drawing.

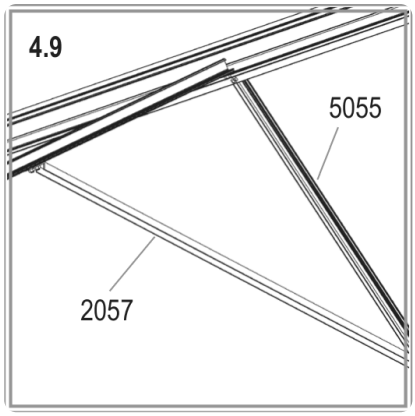


4.9 OUTSIDE VIEW

Work from outside and connect roof braces 2057 to roof glazing bars 5055.

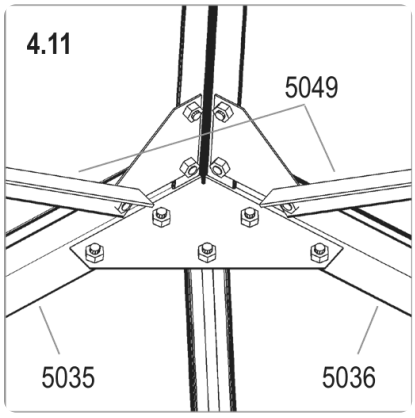


4.11

Connect cross braces 5049 at the gable peak, as shown.

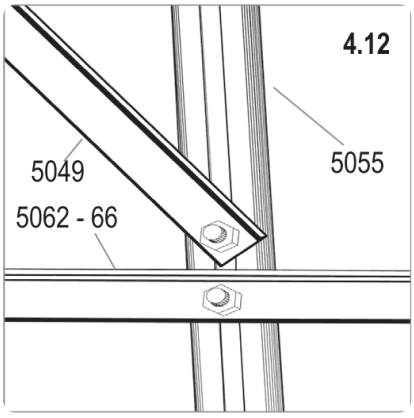

4.12

Bolt cross brace 5049 where it crosses roof glazing bar 5055 and your bar (5062, 5063, 5064, 5065 or 5066).

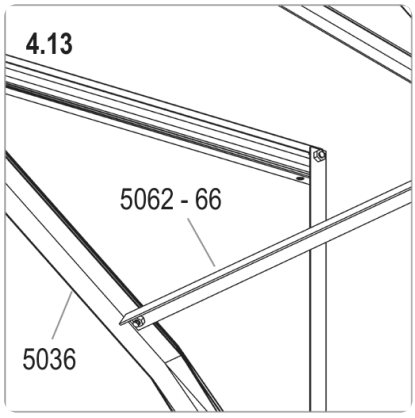


4.13

Connect your bar (5062, 5063, 5064, 5065 or 5066) to roof bar 5036, as shown.

DO THIS NOW

Place the greenhouse on its prepared base, bolt it down loosely and adjust until both corner-to-corner diagonals match. Only then tighten all bolts, to a maximum of 3 Nm.

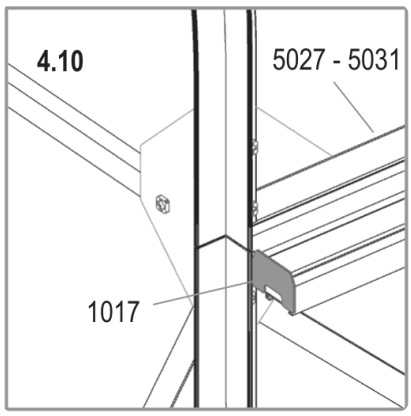

4.10 OUTSIDE VIEW

Press end caps 1017 onto the eave ends.


STEP 5R

5R Fit the right-hand door

Build and hang the first of your two sliding doors.

YOU NEED

1001	×2	1002	×2
1003	×16	1004	×2
1007	×2	1009	×2
1014	×2	1015	×2
1059	×1	1060	×1
1061	×2	1062	×1
1111	×1	1112	×1
1113	×1	1500	×1
1515	×1	2005	×1
2006	×2	5021	×1
5058	×1	5098	×1

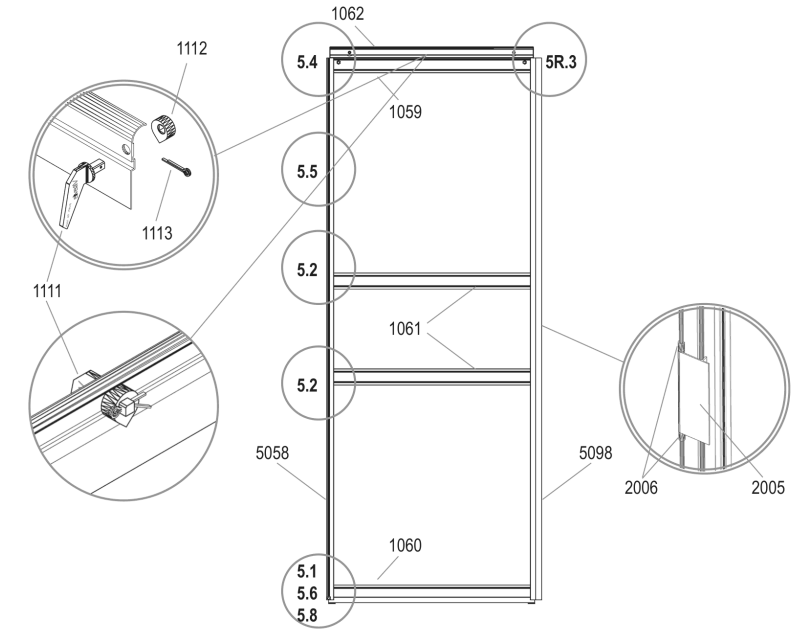


Vitavia drawing 5R. The circled numbers match the pictures below.

INSTALLER TIP

If the door binds or jumps the track, check the frame is square before you force it. An unsquare frame is almost certainly the cause.


WATCH OUT

Never stand an assembled door on gliders 1014; this damages them. Use inside side bar 5098 for the right-hand door and 5099 for the left.

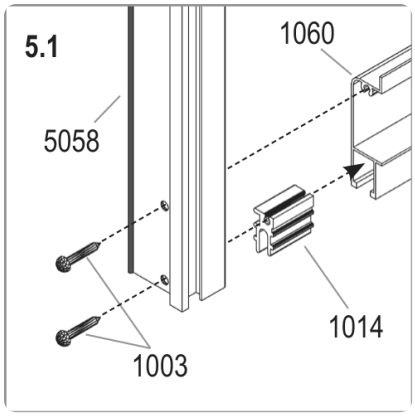


5.1

Push a door glider 1014 onto each end of bottom door bar 1060. Screw outside side bar 5058 to it with screws 1003.

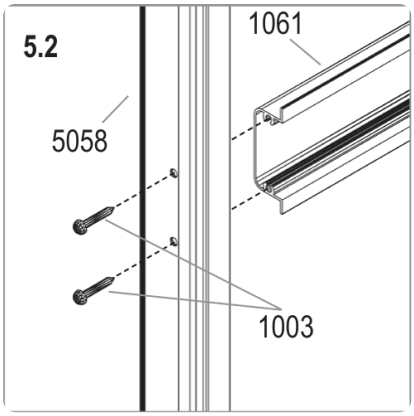


5.2

Screw middle bars 1061 to the side bars with screws 1003.

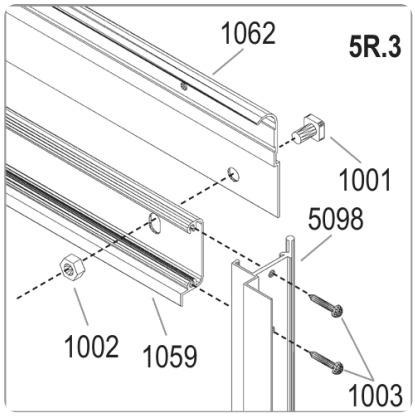


5R.3

Bolt door bar 1062 to upper bar 1059 with bolt 1001 and nut 1002. Screw inside side bar 5098 on with screws 1003.

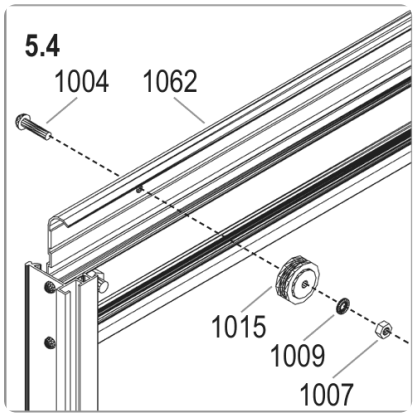


5.4

Fix both door rollers 1015 to door bar 1062 with bolt 1004, washer 1009 and nut 1007.

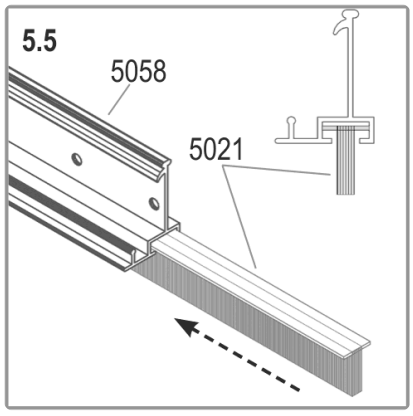

5.5 OUTSIDE VIEW

Slide door seal 5021 into outside side bar 5058.

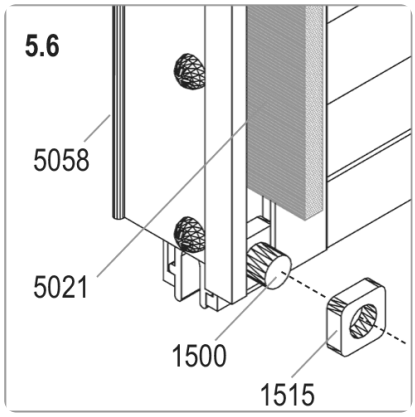

5.6


Slide bolt 1500 into the bottom of the door seal channel and secure it with nut 1515. This stops the seal sliding out.

DO THIS NOW

Fit part 2005 with both parts 2006 to inside side bar 5098. Connect door fixer parts 1111, 1112 and 1113 as shown in the circled views.


DO THIS NOW

Loosen door runner supports 5043 before you hang the door.

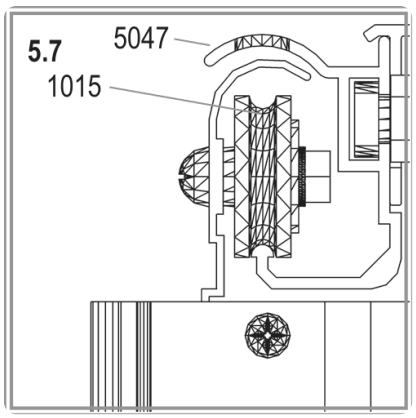

5.7 OUTSIDE VIEW

Work from outside, lift the door and slide rollers 1015 into door runner bar 5047.

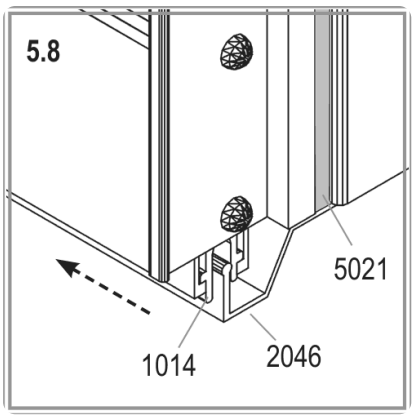

5.8 OUTSIDE VIEW

Check from outside that door gliders 1014 also run in the bottom track of bar 2046.


STEP 5L

5L Fit the left-hand door

Build and hang the second door, then adjust both doors together.

YOU NEED

 **1001** ×2	 **1002** ×3
 **1003** ×16	 **1004** ×2
 **1007** ×2	 **1009** ×2
 **1014** ×2	 **1015** ×2
 **1059** ×1	 **1060** ×1
 **1061** ×2	 **1062** ×1
 **1111** ×1	 **1112** ×1
 **1113** ×1	 **1500** ×1
 **1515** ×1	 **2001** ×1
 **5021** ×1	 **5058** ×1
 **5099** ×1	

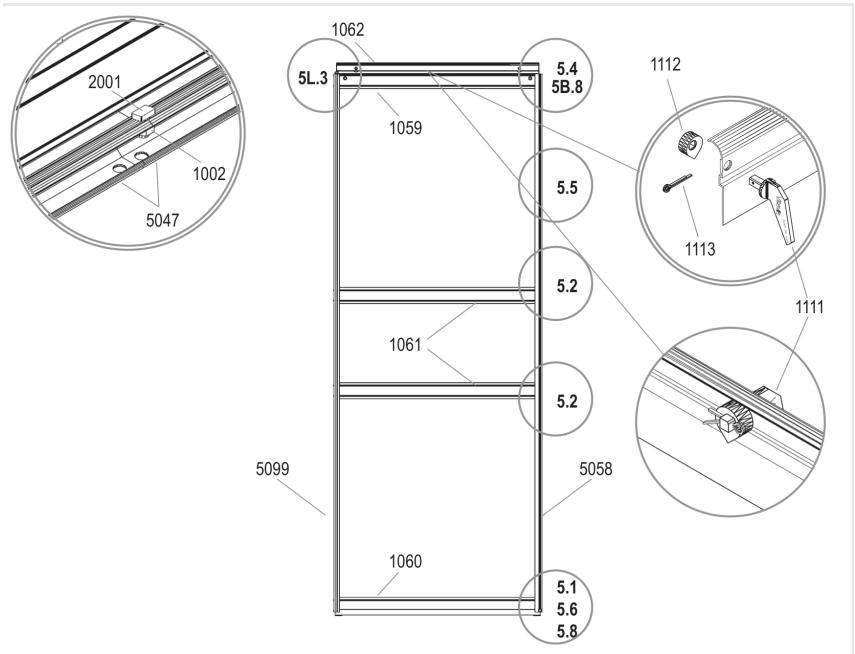


Vitavia drawing 5L. The circled numbers match the pictures below.

INSTALLER TIP

Hang the left-hand door the same way as the right-hand door. Adjust both together until they slide freely.


WATCH OUT

Never stand an assembled door on gliders 1014. This damages them.

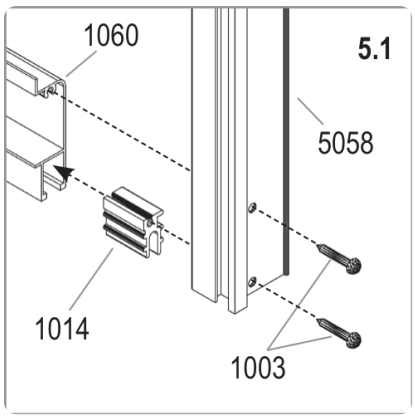


5.1

Push a door glider 1014 onto each end of bottom door bar 1060. Screw outside side bar 5058 to it with screws 1003.

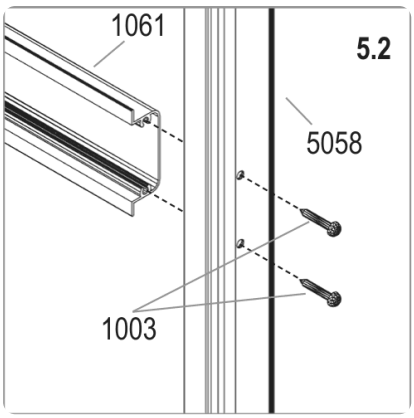


5.2

Screw middle bars 1061 to the side bars with screws 1003.

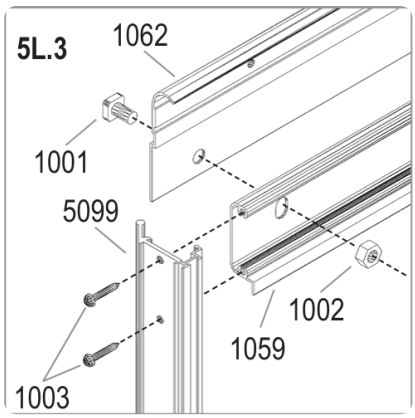


5L.3

Bolt door bar 1062 to upper bar 1059 with bolt 1001 and nut 1002. Screw inside side bar 5099 on with screws 1003.

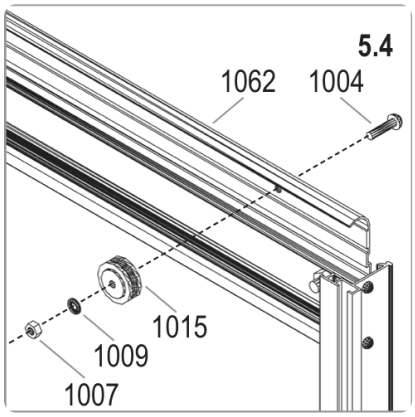


5.4

Fix both door rollers 1015 to door bar 1062 with bolt 1004, washer 1009 and nut 1007.

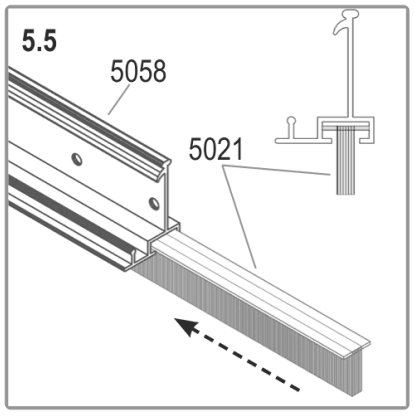


5.5 OUTSIDE VIEW

Slide door seal 5021 into outside side bar 5058.

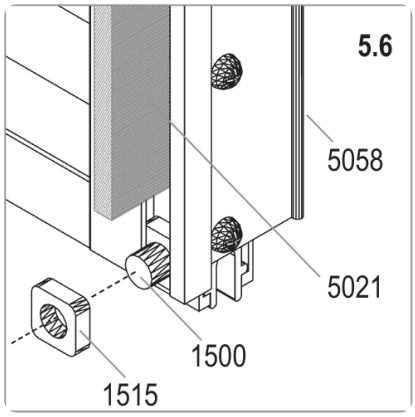


5.6

Slide bolt 1500 into the bottom of the door seal channel and secure it with nut 1515. This stops the seal sliding out.

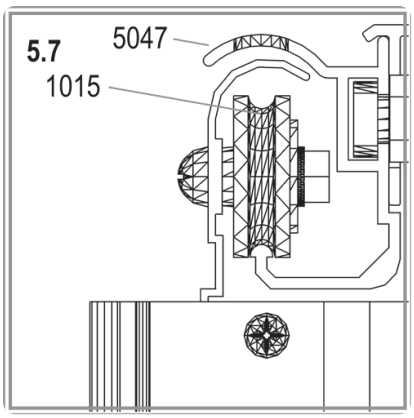

5.7 OUTSIDE VIEW

Work from outside, lift the door and slide rollers 1015 into door runner bar 5047.

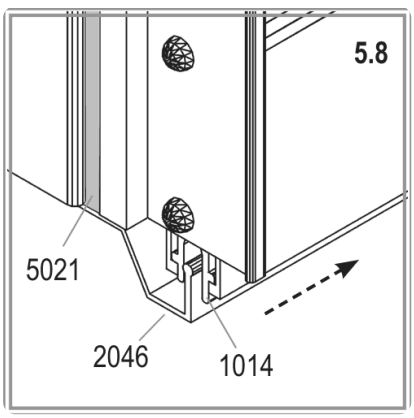

5.8 OUTSIDE VIEW

Check from outside that door gliders 1014 also run in the bottom track of bar 2046.

DO THIS NOW

Connect door fixer parts 1111, 1112 and 1113 as the door drawing shows. Insert bolt 2001 with nut 1002 into the join between door runner bars 5047. Fit a nut and bolt into both runner ends as door stops. Adjust both doors until they slide freely.


STEP 6

6 Build and fit roof vents

Fit one vent on the 5000, two on the 6700 and 8300, or four on the 9900 and 11500.

YOU NEED

- **1001** ×8
- **1002** ×8
- **1006** ×12
- **1019** ×2
- **1063** ×2
- **1064** ×2
- **1065** ×4
- **1066** ×2
- **1067** ×2
- **2016** ×4

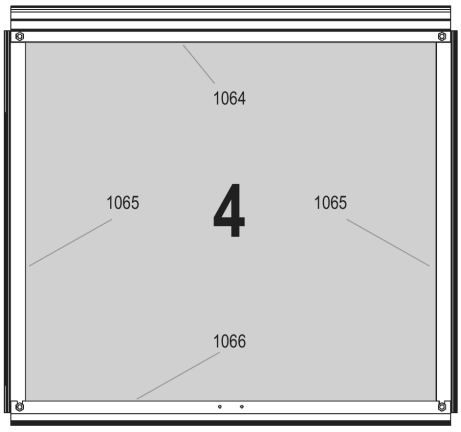

	Art. No.	mm	6700	8300	9900	11500
4	3679491	600 x 544	2	4	4	4


Vitavia drawing 6. The circled numbers match the pictures below.

INSTALLER TIP

Fit the slam bar, vent sill 1063, flat edge up, with its grooved lip down towards the pane below. Recheck it if that pane will not sit snugly.


Watch: Build and fit the window

Scan with your phone camera. Vitavia video.

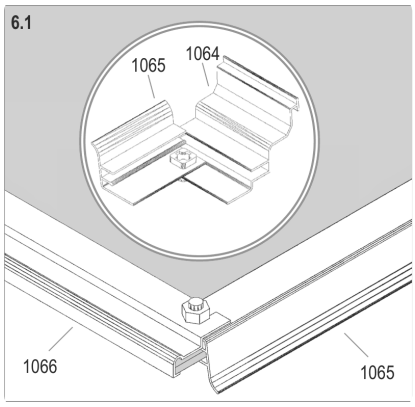


6.1

For glass up to 4 mm thick, join vent side bars 1065 and top bar 1064 as shown here.

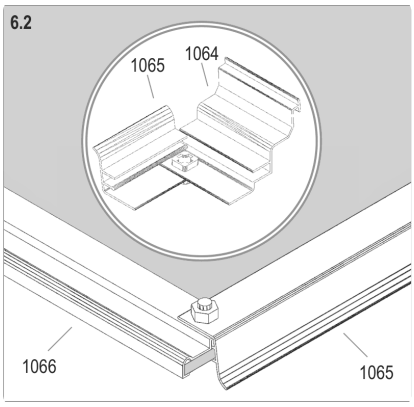


6.2

For glass 4 mm or thicker, join vent side bars 1065 and top bar 1064 as shown here instead.

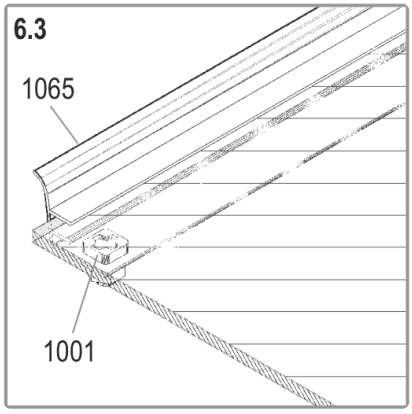


6.3 OUTSIDE VIEW

Insert the bottom bar 1066 bolts into the prepared holes, then slide the glass into the side bar 1065 tracks. Fit bottom bar 1066 and check the vent is square before tightening.

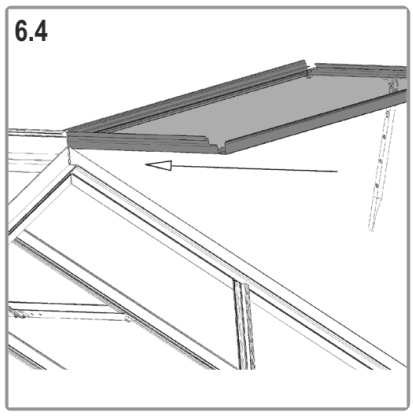


6.4 OUTSIDE VIEW

Hook the vent into the ridge bar from one end of the greenhouse.

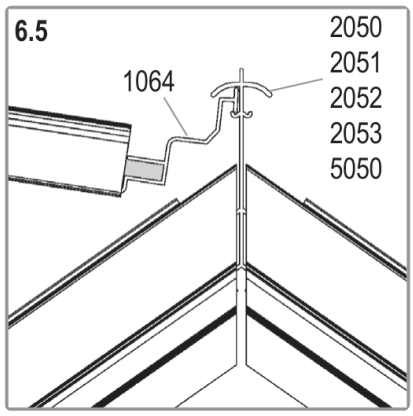


6.5 OUTSIDE VIEW

Hook vent top bar 1064 over your ridge bar (5050, 2050, 2051, 2052 or 2053).

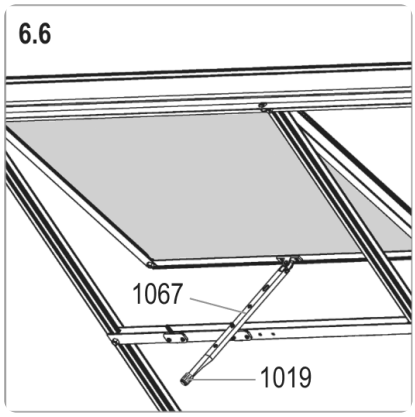


6.6

Slide the vent to your chosen position. Push plastic cap 1019 onto the end of window opener 1067.

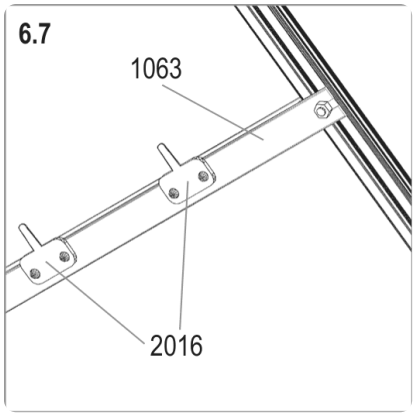

6.7

Fix vent sill 1063 to the extra bolts in the roof bars. Screw both window fixers 2016 onto vent sill 1063 with screws 1006.

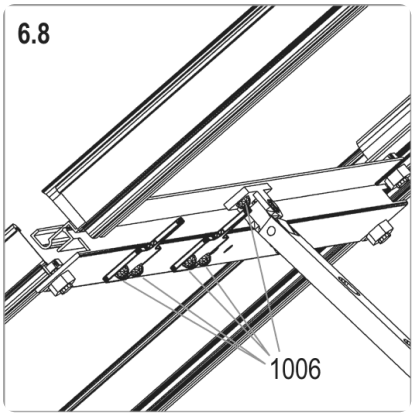

6.8

Screw window opener 1067 to vent bottom bar 1066 with screws 1006.


STEP 7A

7A Fit glazing layout A

Use only the layout matching your supplied glass; check your panes against the drawing's glass table.

YOU NEED

- **1011** ×348
- **1012** ×100
- **1020** ×1
- **5012** ×12
- **5090** ×8

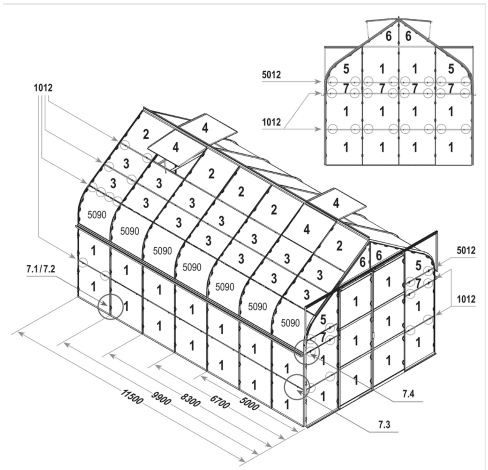

	No.	mm	5000	6700	8300	9900	11500
1	3679011	610 x 610	32	36	40	44	48
2	3679412	610 x 549	5	6	8	8	10
3	3679431	610 x 373	12	16	20	24	28
4	3679491	600 x 544	1	2	2	4	4
5	3679532	610 x 610 curve	4	4	4	4	4
6	3679541	610 x 8 / 434	4	4	4	4	4
7	3679552	610 x 229	6	6	6	6	6
5090	3679015	610 x 610 x 1.6	6	8	10	12	14
Total			70	82	94	106	118

Vitavia drawing 7A. The circled numbers match the pictures below.

INSTALLER TIP

Soak the whole seal reel in hot soapy water so it softens and presses on more easily. Check the layout if a pane looks too big; it usually belongs elsewhere.

WATCH OUT


Never force a pane; this cracks glass. If it will not seat, correct the unsquare frame first.

Watch: Fitting the glazing rubber
Scan with your phone camera. Vitavia video.

Watch: Glazing with horticultural glass
Scan with your phone camera. Vitavia video.


Watch: Glazing the roof with toughened glass
Scan with your phone camera. Vitavia video.

Watch: Bar capping (toughened glass and polycarbonate)
Scan with your phone camera. Vitavia video.

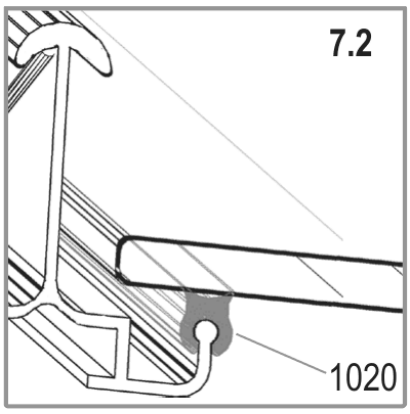


7.2 OUTSIDE VIEW

Press rubber glazing seal 1020 onto the aluminium profiles and cut it to length. Fit all seals before you insert any glass.

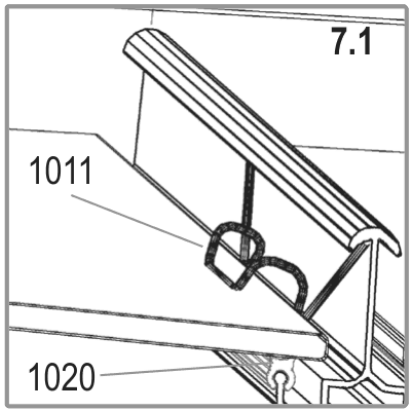

7.1 OUTSIDE VIEW

Start the roof at the eave with polycarbonate sheets 5090 over the curved section. Fix them with spring clips 1011, bend them over the curve and continue with clips 1011.

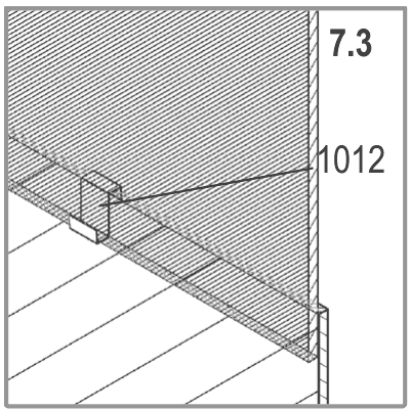


7.3 OUTSIDE VIEW

Overlap each next pane over the pane below. Secure the overlap with glass retaining clips 1012 between the panes.

DO THIS NOW

Glaze the sides from the bottom upwards.

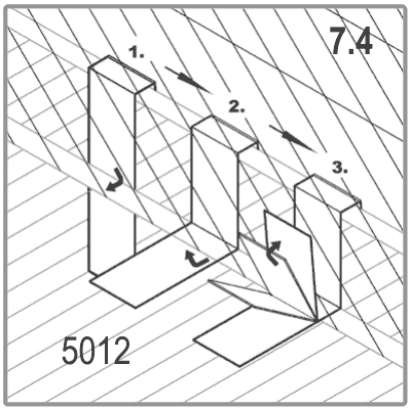

7.4 OUTSIDE VIEW

On both gables, fit part 5012 on pane 7 as shown. Bend it up to hold upper pane 5.


STEP 7B

7B Fit glazing layout B

Use only the layout matching your supplied glass; check your panes against the drawing's glass table.

YOU NEED

- **1011** ×348
- **1012** ×32
- **1020** ×1
- **5012** ×12
- **5090** ×8

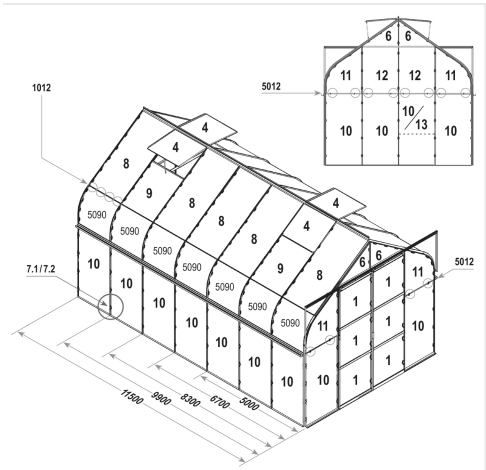

	No.	mm	5000	6700	8300	9900	11500
1	3679011	610 x 610	6	6	6	6	6
4	3679491	600 x 544	1	2	2	4	4
6	3679541	610 x 8 / 434	4	4	4	4	4
8	3679501	610 x 1280	5	6	8	8	10
9	3679511	610 x 736	1	2	2	4	4
10	3679521	610 x 1213	12	14	16	18	20
11	3679531	610 x 168 / 833	4	4	4	4	4
12	3679551	610 x 833	2	2	2	2	2
13	3679561	610 x 753	1	1	1	1	1
5090	3679015	610 x 610 x 1.6	6	8	10	12	14
Total			42	49	55	63	69

Vitavia drawing 7B. The circled numbers match the pictures below.

INSTALLER TIP

Soak the whole seal reel in hot soapy water so it softens and presses on more easily. Check the layout if a pane looks too big; it usually belongs elsewhere.

WATCH OUT


Never force a pane; this cracks glass. If it will not seat, correct the unsquare frame first.

Watch: Fitting the glazing rubber
Scan with your phone camera. Vitavia video.

Watch: Glazing with horticultural glass
Scan with your phone camera. Vitavia video.


Watch: Glazing the roof with toughened glass
Scan with your phone camera. Vitavia video.

Watch: Bar capping (toughened glass and polycarbonate)
Scan with your phone camera. Vitavia video.

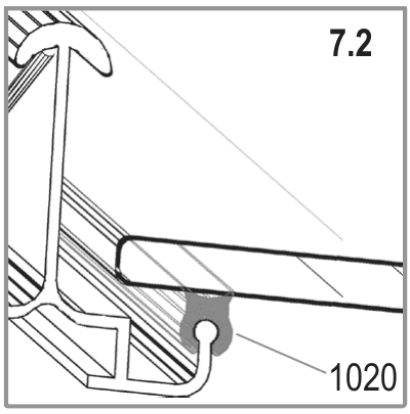


7.2 OUTSIDE VIEW

Press rubber glazing seal 1020 onto the aluminium profiles and cut it to length. Fit all seals before you insert any glass.

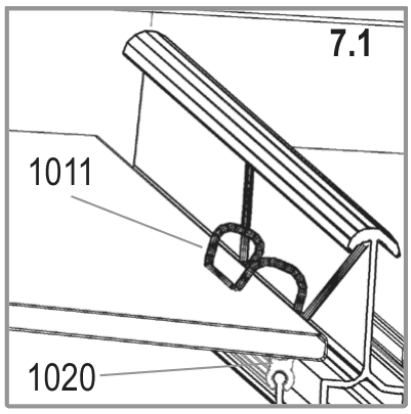

7.1 OUTSIDE VIEW

Start the roof at the eave with polycarbonate sheets 5090 over the curved section. Fix them with spring clips 1011, bend them over the curve and continue with clips 1011.

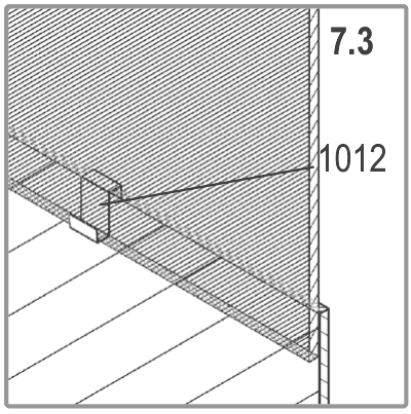


7.3 OUTSIDE VIEW

Overlap each next pane over the pane below. Secure the overlap with glass retaining clips 1012 between the panes.

DO THIS NOW

Glaze the sides from the bottom upwards.

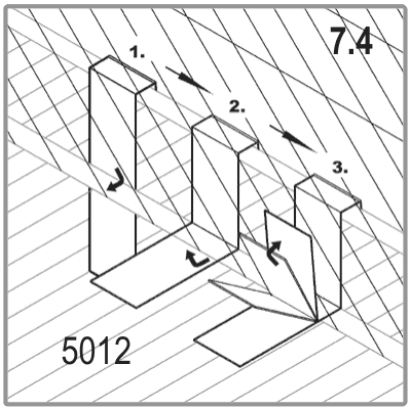

7.4 OUTSIDE VIEW

On both gables, fit part 5012 on pane 10 as shown. Bend it up to hold upper pane 11.

Glass for your greenhouse

PANE	SIZE (MM)	SATURN 6700
A 1	610 × 610	36
A 2	610 × 549	6
A 3	610 × 373	16
A 4	600 × 544	2
A 5	610 × 610 curve	4
A 6	610 × 8 / 434	4
A 7	610 × 229	6
A 5090	610 × 610 × 1.6	8
B 1	610 × 610	6
B 4	600 × 544	2
B 6	610 × 8 / 434	4
B 8	610 × 1280	6
B 9	610 × 736	2
B 10	610 × 1213	14
B 11	610 × 168 / 833	4
B 12	610 × 833	2
B 13	610 × 753	1
B 5090	610 × 610 × 1.6	8
	Total	**A: 82, B: 49**

Pane numbers match the glazing layout in the drawing above.

LAST JOBS

Finish and look after it

Finish

- [ ] Anchor the greenhouse. This is essential because a greenhouse this size catches a lot of wind.
- [ ] Seal the edges with neutral silicone if you wish. Silicone is not supplied.
- [ ] Stick the warning label inside the greenhouse.
- [ ] Stick the model label onto door bar 1062. You will need it to order spare parts.
- [ ] Keep this guide somewhere safe.

Looking after it

- [ ] Shut both doors and all vents in high winds.
- [ ] Clear the roof or support it during heavy snow. Heat the greenhouse in winter.
- [ ] Wash the greenhouse occasionally with a mild detergent that does not attack aluminium or the glazing clips.
- [ ] Keep the upper and lower door tracks clean to prevent grit build-up.
- [ ] Add the greenhouse to your home insurance and check local building rules about its position.

Drawings reproduced from the Vitavia assembly instructions (Vitavia manual 006.01.1212 (Saturn, printed as Diana)). Greenhouse Stores, greenhousestores.co.uk.